

VOLUME ADJUST

VOLUME MUTE

KEY-PAD LOCK

MODES



ONE HAND VOLUME ADJUST



 
SQUELCH



TX POWER



A / B BANDS SELECT



MISC

TX POWER
L1 : 0.1 W - L2 : 1.0 W - L3 : 2.5 W - HI : 5.0 W

TEXT EDITING
A/B CLR : TO END - INSERT : CHR
DELETE : CHR - CLRALL : ALL V/M

TEXT ENTRY
ENT ENTER F BACK SELECT PTT SAVE

BAND SCOPE
V/M MR>VFO TUNE BAND HOLD

DIRECT RECALL
ENT MEMORY NUMBER

VFO / BANK SCAN



BATTERY VOLTAGE ON DISPLAY



STORE VFO TO MEMORY



REPEATER SHIFT / SIMPLEX



CTCSS TONE ON / OFF



CTCSS TONE FREQUENCY



MEMORY NAME / MEMORY PROTECT




MEMORY BANK




VFO / BANDS / AM / FM



ACTIVATE APRS

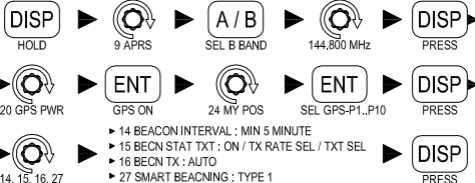


APRS MESSAGES

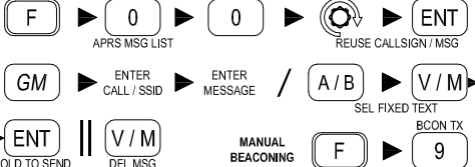

GPS POSITION / INFO



 WEATHER BAND (FOR PRESET FREQ. PRESS BAND)



BEACON SHORTCUT



DN (AUTO DM)
DN (CF4M) (WIDE DM)
VW (HQ DIG) (WIDE DM)
TN (TONE ENCD)
TSQ (TONE SQLC)
FM (ANALOG)
FM (AUTO ANLG)